


A Whole New Sensation For A Whole New Orgasm

A whole new pleasure concept from LELO, the SONA™ sonic massager stimulates the entire clitoris - even the parts you don't see - with eager, fluttering pulses, for a different kind of orgasm produced by the massage of sonic waves. It's a prolonged climax after a sensual build-up, an orgasm that comes from somewhere deep within you.

ORDERING REFERENCE NUMBER (EAN)

7350075 026171 (BLACK)
 7350075 026164 (PINK)
 7350075 026157 (CERISE)

AVAILABLE COLORS

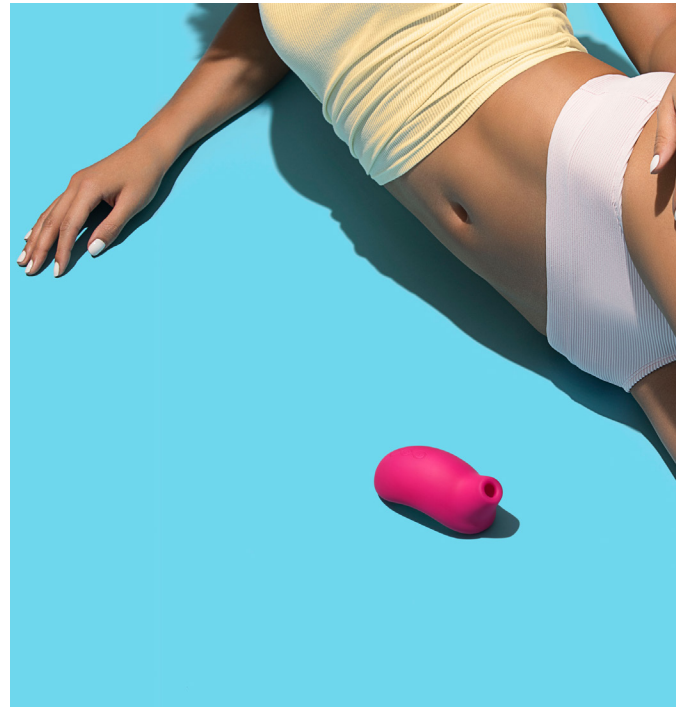




HOW TO USE:



Make sure the SONA™ is unlocked by pressing and holding the + and - buttons together for 3 seconds until the light turns on.
 Press + button to turn on; press again to increase vibration strength.
 Press () button to cycle through the 8 stimulation modes.
 Press - button to reduce vibration strength; press and hold to turn off.

PRODUCT IMAGES



FEATURES	BENEFITS
Completely Waterproof Easy to Clean 	The smooth, waterproof design makes it incredibly easy to keep clean.
Fully USB-Rechargeable 	Using the supplied USB charging cable, SONA Cruise can go wherever you go.
8 Pleasure Settings 	A well-designed selection of sensations for that just-right feeling.
Ahead of Competitors in EVERY Respect	More power, more features, more quality, more pleasure.

TECHNICAL DATA

Material: Silicone ABS	User Time: 1h
Finish: Matte, Glossy	Number of Modes: 8
Size: 99 x 88 x 56mm	Standby: 90 days
Weight: 116g	Frequency: 120Hz
Battery: Li-Ion 530mA 3.7V	Max. Noise Level: <50dB
Charging: 2h at 5.0V 400mA	Interface: 3-button interface