 


# Gplug Twist

EN User Guide

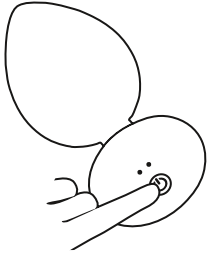


## SWITCHING ON

To avoid accidental switching, a toy has a Travel Lock option. Press the button ON at the bottom of Gplug Twist and hold it for 2 seconds to switch on.


## CHANGING THE MODES

Click the button ON to change the mode of vibration. The toy has 6 modes.

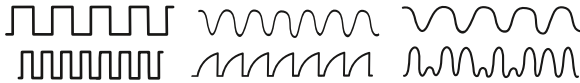

## SWITCHING OFF


Press and hold the button ON for 2 seconds to switch off.

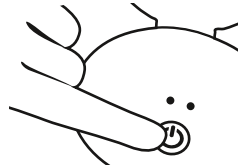

## Remote control of GRING

Gplug Twist can be controlled remotely by a no-cord controller – the Gring (sold separately). The controller fits a finger perfectly enabling an easy switch to a different mode while you enjoy the Gplug Twist.


● ON/increasing the vibration

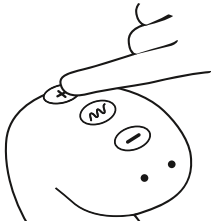

● Modes of vibration



● Decreasing the vibration / OFF

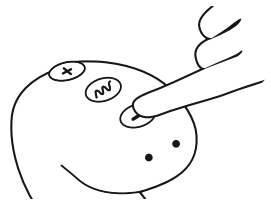

## CHARGING

Connect the charger to the points of charging at the bottom of the toy. The USB-end is connected to the USB port of your computer or adaptor. When charging a light indicator starts blinking. As soon as the toy is fully charged the light stops blinking. The buttons will not work when charging meaning you can't use the toy.

- When the battery is low Gplug Twist will switch modes automatically to switch off.
- Charging time is around 1.5 hours. After charged fully the toy runs about 40 minutes at max speed.